
Installation instructions

Sliding door fittings Flatec I

for 2 leaf wood doors (max. 1-3/4") with Soft-Tec Stopper

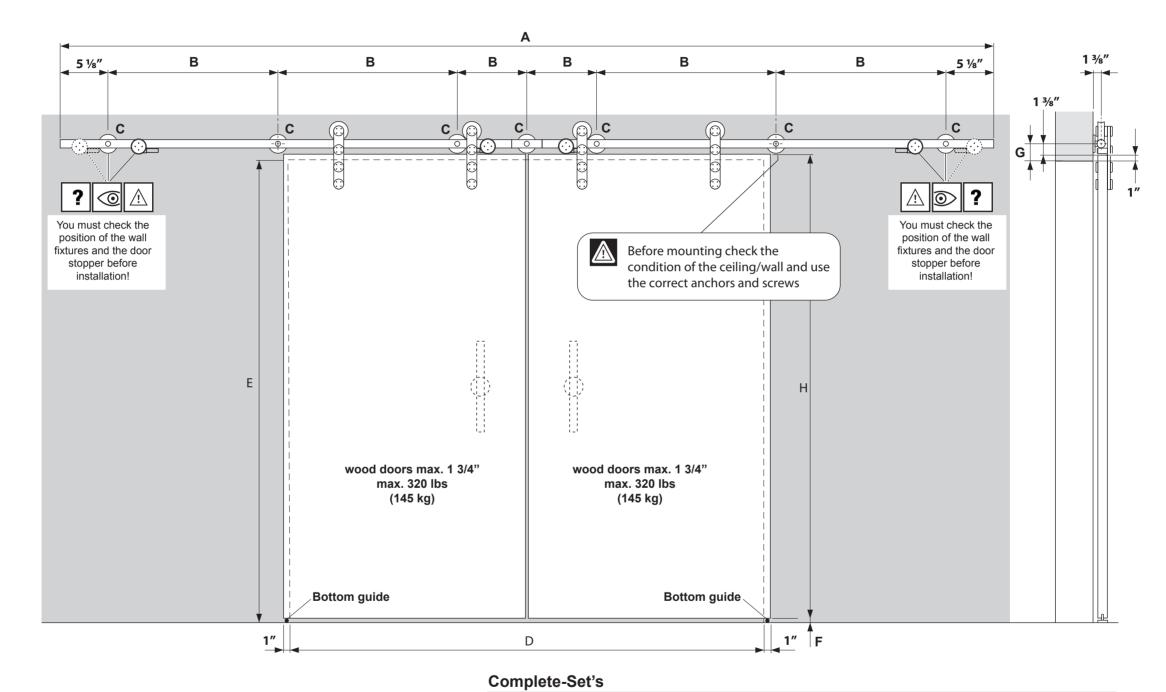

В

Inch

26 15/16'

22 5/16

22 3/4"

Inch

118 1/8"

144"

192"

С

each

5

9

D

Inch

55 1/8" - 59"

59" - 70 %"

78 3/4" - 94 1/2"

ABP beyerle

Beyerle US L.L.C.

Ε

max.Inch

98 7/16"

98 7/16"

98 7/16"

F

Inch

1/4" - 3/8" 2 3/8"

1/4" - 3/8" 2 3/8"

1/4" - 3/8" 2 %"

G

Inch


max. Inch

(H=E-F+1")

99 1/8"

99 1/8"

99 1/8"

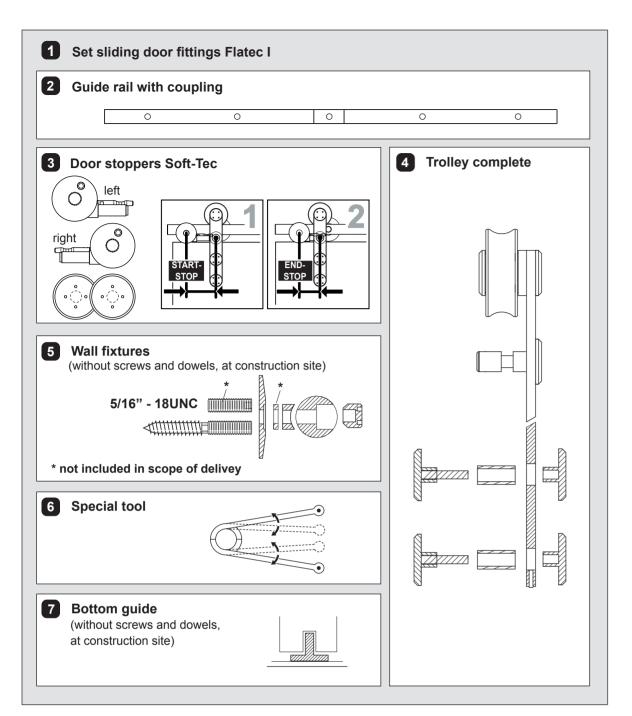

Set Flatec I	Set / Each					
1 track rail length	2	3	4	5	6	7
118 1/8"	1	4	4	5	1	2
144"	1	4	4	7	1	2
192"	1	4	4	9	1	2

Beyerle US L.L.C., ABP-Beyerle, it's subsidiaries and agents are not responsible or liable for damage or injury to any persons or property due to improper installation of it's products. All liabilities reside solely with the installer.



Comply with all general safety regulations when installing the sliding door fittings!

Installation to be completed by qualified licensed contractor.

Be sure to tighten all screw connections one week after starting to use the sliding door fittings!

Neveruse scouring agents to clean the sliding door fittings; rather use commercially available stainlesssteel cleaners!



<u>/!\</u>

07

 \bigoplus

Attention

Screw on

Screw on

Screw on

Install

Dowels

Level

Measure Mark

Visual inspection

2 people required

Clarify questions


See Instructions


Special-tool


Measure


Secure


Drill

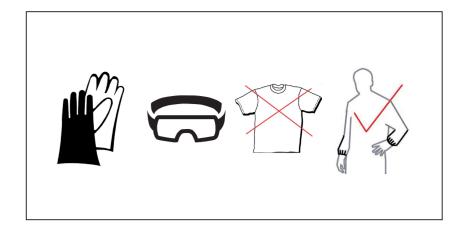


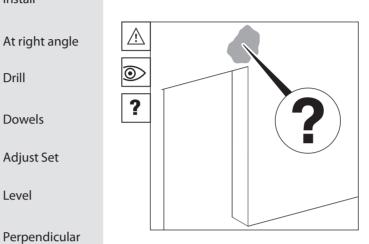


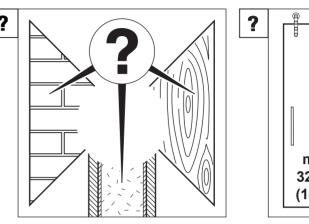


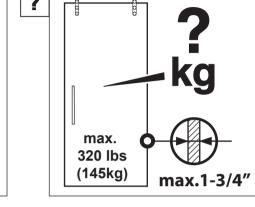

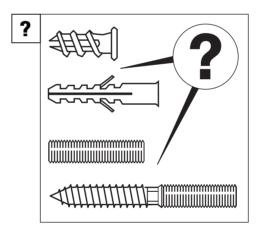

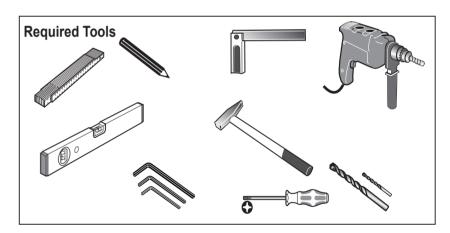

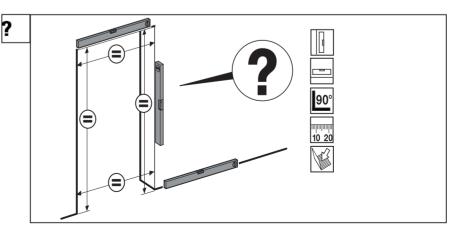

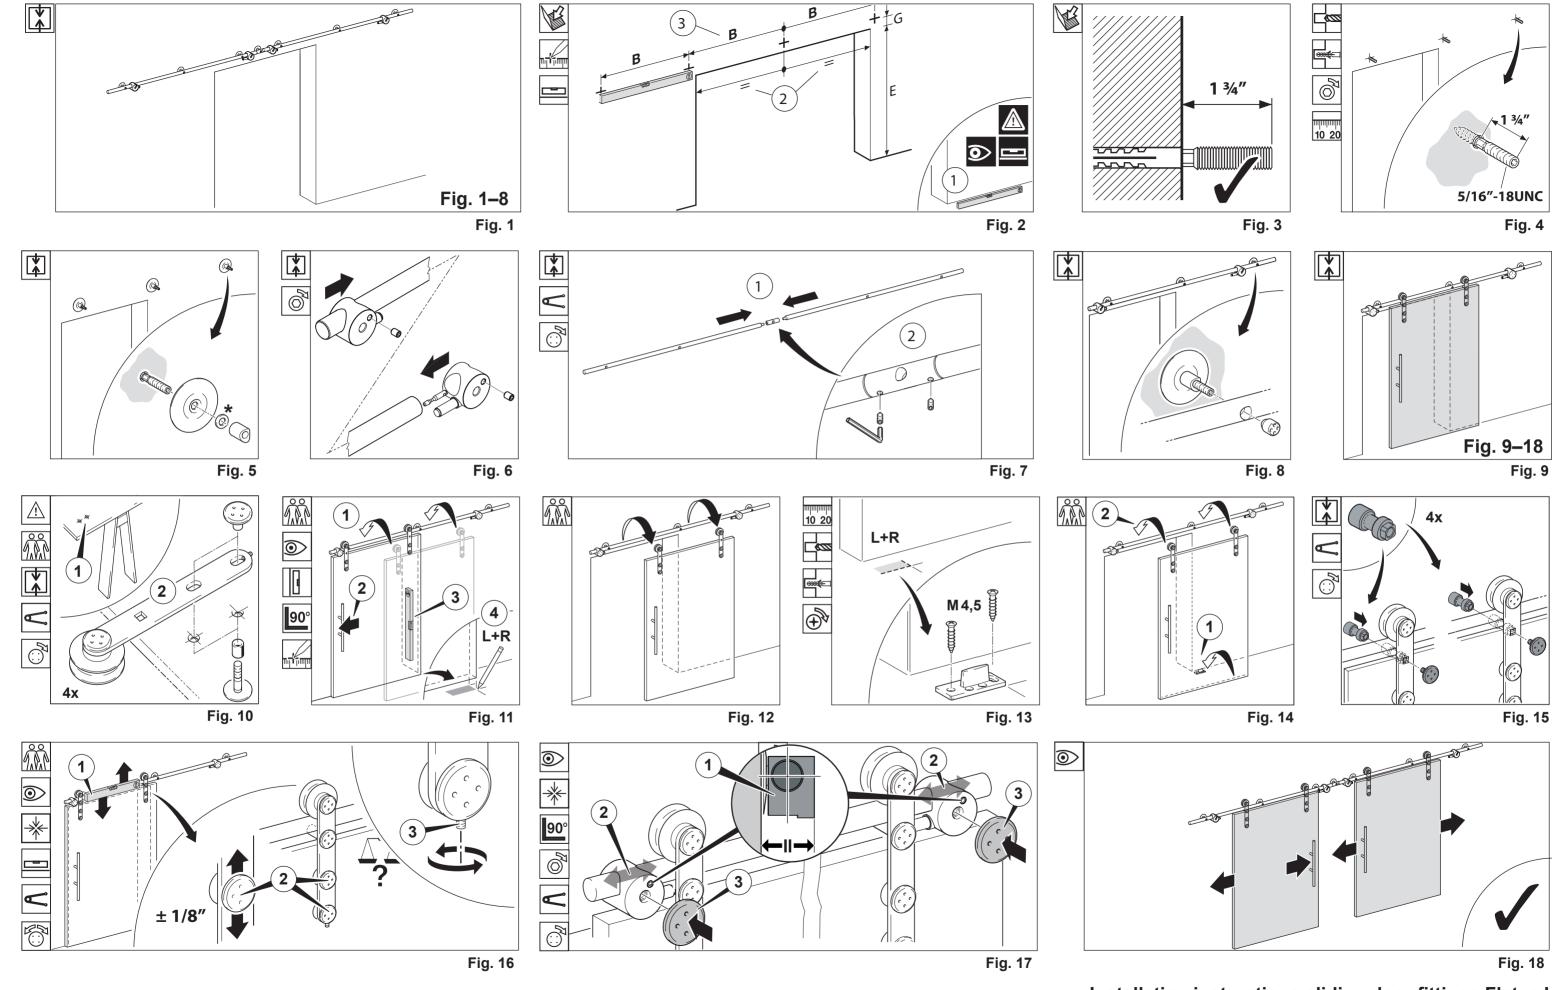

Installation instructions sliding door fittings Flatec I for 2 leaf wood doors (max. 1-3/4" thickness)